



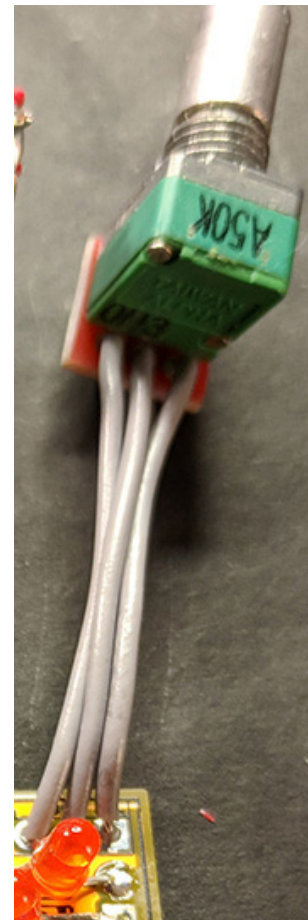

9MM PANEL

FX TYPE: Utility

© 2018 [madbeanpedals](http://madbeanpedals.com)

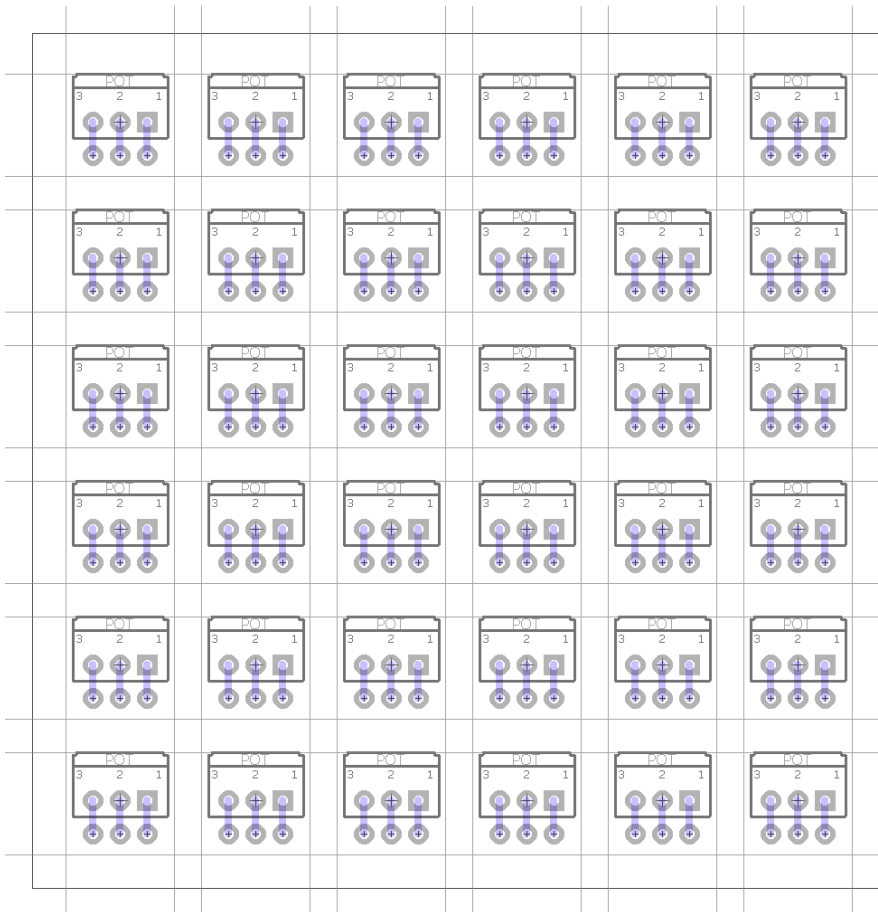

You break them apart (gently). You solder them to your 9mm pots. You solder wires to the PCBs. You solder wires to your other PCB.

You get 36 of them. If you buy two, you get 69,....84....72 of them.

P.S. You can solder the 9mm pots to either side of the PCB.

P.S.S. You could maybe make a happy little resistor tree with them.